

CLIPPERCREEK

A division of Enphase Energy, Inc.



User Manual



Model LCS



PLEASE NOTE

This user's manual includes the latest information at the time of printing. Enphase Energy reserves the right to make changes to this product without further notice. Changes or modifications to this product by other than an authorized service facility may void the product warranty.

If you have questions about the use of this product, contact your customer service representative. Refer to the Customer Support section located in this guide.

**To view the latest version of this manual please visit
clippercreek.com/installation-manuals**



WARNING: This product can expose you to chemicals, including Carbon Black, which is known to the State of California to cause cancer. For more information go to:
www.P65Warnings.ca.gov



AVERTISSEMENT: Ce produit peut vous exposer à des agents chimiques, y compris Noir Carbone, identifiés par l'État de Californie comme pouvant causer le cancer. Pour de plus amples informations, prière de consulter: www.P65Warnings.ca.gov



ADVERTENCIA: Este producto puede exponerte a químicos, incluso Negro Carbón, que se conocido por el Estado de California como causante de cáncer. Para más información visite:
www.P65Warnings.ca.gov

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS5
 Instructions Pertaining to a Risk of Fire or Electric Shock 6
 Additional Safety Information 10

FCC INFORMATION.....12

OPERATION13
 The LCS Front Panel 14

INSTALLATION: SERVICE CONNECTIONS15

MOUNTING PROCEDURES21
 LCS EVSE Mounting for Hollow-Wall Construction 22
 LCS EVSE Mounting for Solid-Wall Construction 23

MOUNTING THE SAE J1772 LCS CONNECTOR HOLSTER...24

WIRING INSTRUCTIONS (Hardwired LCS).....25

RECEPTACLE INSTRUCTIONS (Plug-In LCS-P).....26

CHARGE CABLE WRAP GUIDELINES27

GROUNDING INSTRUCTIONS.....28
 LCS Hardwired EVSE Grounding 28
 LCS-P Plug-in EVSE Grounding 28

MOVING & STORAGE INSTRUCTIONS29

MAINTENANCE30

SPECIFICATIONS.....31

CUSTOMER SUPPORT32

WARRANTY INFORMATION33

ILLUSTRATIONS

Figures

1. The LCS Front Panel	14
2. 220/240V Single-Phase.....	18
3. 208V 3-Phase, Wye-Connected	18
4. 240V 3-Phase, Delta-Connected, with Center-Tap on One Leg...	19
5. Mounting the LCS to Hollow-Wall.....	22
6. Mounting the LCS to a Solid-Wall	23
7. Mounting the LCS Connector Holster using Exterior Wood Screws and Washers	24
8. Wiring the LCS in a Junction Box	25
9. Preferred Orientation of the NEMA Receptacles above the LCS-P.....	26
10. Drape the Charge Cable Loosely around the LCS Enclosure....	27

Tables

1. Front Panel LED Information	14
2. LCS Configurations	15

IMPORTANT SAFETY INSTRUCTIONS

Carefully read these instructions and the charging instructions in your vehicle owner's handbook before charging your electric vehicle.

The following symbols may be found in this manual or on labels affixed to the Electric Vehicle Supply Equipment (EVSE):

NOTE: *This means pay particular attention.* Notes contain helpful suggestions.

REMARQUE: *Cela signifie accorder une attention particulière.* Les remarques contiennent des suggestions utiles.

NOTA: *Esto significa que debe prestar especial atención.* Las notas contienen sugerencias útiles



CAUTION: *This symbol means be careful.* You are capable of doing something that might result in damage to the equipment.

ATTENTION: *Ce symbole signifie être prudent.* Vous êtes capable de faire quelque chose qui pourrait causer des dommages à l'équipement.

ATENCIÓN: *Este símbolo significa tener cuidado.* Usted es capaz de hacer algo que puede resultar en daños al equipo.



WARNING: This symbol means danger. This is a situation that could cause bodily injury. Before working on any electrical equipment, be aware of the hazards involved with electrical circuitry and standard practices for preventing accidents.

AVERTISSEMENT: Ce symbole signifie un danger. Vous êtes dans une situation qui pourrait causer des blessures corporelles. Avant de travailler sur un équipement électrique, être conscient des dangers présentés par les circuits électriques et les pratiques courantes de prévention des accidents.

ADVERTENCIA: Este símbolo significa peligro. Está en una situación que podría lesionarse. Antes de trabajar en cualquier equipo eléctrico, debe estar consciente de los riesgos relacionados con los circuitos eléctricos y practicas estándares de prevención de accidentes.

Instructions Pertaining to a Risk of Fire or Electric Shock

When using the the LCS, basic electrical safety precautions should be followed:

- Use this EVSE to charge electric vehicles equipped with an *SAE J1772 charge port only*. Consult the vehicle owner's manual to determine if the vehicle is equipped with the correct charge port.
- Make certain the SAE J1772 charge cable is positioned so it will not be stepped on, tripped over, or otherwise subjected to damage or stress.
- This product contains no user serviceable parts. Consult the Customer Support section in this manual for service information. Do not attempt to repair or service the EVSE.
- Do not operate this EVSE if it or the SAE J1772 charge cable is physically open, cracked, frayed, or otherwise visibly damaged. Contact your Service Representative for service immediately. Consult the Customer Support section in this manual for information on the Service Representative in your area.
- Not for use in commercial garages where a COMMERCIAL GARAGE is defined as a facility (or portion thereof) used for the repair of internal combustion vehicles in which the area may be classified due to flammable vapors being present (such as from gasoline.)
- Do not place fingers inside of the coupler end of the SAE J1772 charge cable.
- Do not allow children to operate this device. Adult supervision is mandatory when children are in proximity to an EVSE that is in use.

Additional Instructions for Plug-In LCS Configurations

- 240V plugs are specifically designed for **occasional** relocation, such as moving from one home to another home.
- For personal safety, the circuit breaker **MUST** be turned off prior to plugging in AND/OR unplugging 240V appliances (including this EVSE).
- A dedicated NEMA outlet (receptacle) is **highly recommended**. NEMA receptacles wear out over time particularly when repeated insertion and removal of NEMA plugs occur. Check the receptacle to be sure it is not worn. A worn receptacle can cause the plug connection to overheat and become a fire hazard. It is recommended that plug-in EVSE remain plugged in.
- Have an electrician verify all wiring to the outlet is correct and in compliance with local code requirements before connecting the EVSE.

- **Do Not** use this EVSE with an extension cord or wall plug adapter. Plug this EVSE directly into the receptacle.
- Ensure that the EVSE is mounted to the wall or placed on a support so it does not hang from the receptacle. Receptacles are not designed to support the weight of the EVSE.

Instructions se Rapportant à un Risque d'Incendie ou de Choc Électrique

Lorsque l'utilisation de la LCS, précautions fondamentale de sécurité électrique doivent être suivies:

- Utilisez cette station de recharge pour charger les véhicules électriques équipés d'un *SAE J1772 port de recharge seulement*. Consultez le manuel du propriétaire du véhicule afin de déterminer si le véhicule est équipé d'un correcte port de recharge.
- Assurez-vous que le SAE J1772 câble de recharge sur la station de recharge est positionné de telle sorte qu'il ne sera pas piétiné, accroché plus de, ou autrement endommagé ou de subir le stress.
- Ce produit ne contient aucune pièce réparable par l'utilisateur. Consultez la section Support à la Clientèle dans ce manuel pour obtenir des informations de service. N'essayez pas de réparer ou d'entretenir la station de recharge vous-même.
- Ne faites pas fonctionner votre station ou le câble de recharge si elles sont physiquement ouverte, fissuré, effiloché, ou autrement visiblement endommagé. Contactez votre représentant du service pour service immédiatement. Consultez la section Support à la clientèle dans ce manuel pour obtenir des informations sur le représentant du service dans votre région.
- Ne pas utiliser dans les garages commerciaux où un garage commercial est défini comme une installation (ou une partie) utilisé pour la réparation de véhicules à combustion interne dans lequel la zone peut être classée en raison de vapeurs inflammables étant présents (Tels que de l'essence.)
- Ne posez pas les doigts à l'intérieur de l'extrémité du SAE J1772 coupleur du câble de recharge.
- Ne pas laisser les enfants utiliser cet appareil. Supervision d'un adulte est obligatoire lorsque des enfants sont à proximité d'une station de recharge qui est en cours d'utilisation.

Instructions supplémentaires pour les configurations LCS enfichables

- Les prises de 240V sont spécialement conçues pour les relocalisations **occasionnelles**, tel que le déménagement d'une maison à une autre.
- Pour des raisons de sécurité, le disjoncteur DOIT être désactivé avant de brancher ET/OU débrancher les appareils de 240V (dont cet EVSE).
- Une sortie (réceptacle) NEMA dédiée est **fortement recommandée**. Les réceptacle NEMA s'usent avec le temps, en particulier lorsque l'insertion et le retrait des prises NEMA sont répétés. Vérifiez le réceptacle pour vous assurer qu'elle n'est pas usée. Une réceptacle usée peut provoquer une surchauffe du connecteur de raccordement et constituer un risque d'incendie. Ne pas utiliser de prise qui deviendrait excessivement chaude. Il est recommandé que la prise de l'EVSE reste branchée.
- Faites vérifier par un électricien que tout le câblage de réceptacle soit correctement effectué et conforme aux exigences de la réglementation locale avant de raccorder l'EVSE.
- **Ne pas** utiliser cet EVSE avec une rallonge ou adaptateur de prise murale. Branchez cet EVSE directement dans le réceptacle.
- S'assurer que l'EVSE est fixé au mur ou placé sur un support afin qu'il ne soit pas suspendu à l'installation électrique. Le réceptacle n'est pas conçu pour supporter le poids de l'EVSE.

Instrucciones Pertinentes a un Riesgo de Fuego o Descarga Eléctrica

Se deben seguir precauciones básicas de seguridad eléctrica cuando usa la LCS:

- Utilice esta estación de carga para cargar vehículos eléctricos equipados sólo con un *puerto de carga SAE J1772*. Consulte el manual del usuario del vehículo para determinar si el vehículo está equipado con el puerto de carga correcto.
- Asegúrese de que el cable de carga de la estación de carga de SAE J1772 está colocado de manera que no se puede pisar o tropezarse con este, o de lo contrario, sometido a daño o tensión.
- Este producto no tiene piezas que el usuario puede reparar. Consulte la sección de Apoyo al Cliente en este manual para información de mantenimiento. No intente reparar o mantener la estación de carga.

- No opere su estación si ésta o el cable de carga SAE J1772 está físicamente abierto, agrietado, deshilachado o de lo contrario dañado. Contacte su representante de Apoyo al Cliente inmediatamente para recibir servicio. Consulte la Sección de Apoyo al Cliente en este manual para obtener información sobre el representante de servicio en su área.
- Este dispositivo no es para uso en garajes comerciales, en el que un GARAJE COMERCIAL se define como una instalación (o parte de la misma) utilizada para la reparación de vehículos de combustión interna, en los que el área puede ser clasificada debido a la presencia de vapores inflamables (como los de la gasolina).
- No coloque los dedos dentro del extremo del acoplador del cable de carga SAE J1772.
- No permita que los niños usen este dispositivo. La supervisión de un adulto es obligatoria cuando hay niños cerca de una estación de carga que está en uso.

Instrucciones adicionales para configuraciones de LCS enchufables

- Los tomacorrientes de 240V están específicamente diseñados para reubicaciones **ocasionales**, como la mudanza de una casa a otra.
- Por su seguridad personal, el interruptor de circuito DEBE estar apagado antes de enchufar Y/O desenchufar dispositivos de 240V (incluyendo este dispositivo EVSE).
- Se **recomienda encarecidamente** una salida (receptáculo) NEMA dedicada. EL receptáculo NEMA se desgastan con el tiempo, especialmente cuando se produce una conexión y desconexión repetidas de los enchufes NEMA. Verifique el receptáculo para asegurarse de que no esté desgastada. Un receptáculo desgastado puede causar que la conexión del enchufe se sobrecaliente y sea riesgo de incendio. No use un enchufe que se caliente demasiado. Se recomienda que el EVSE enchufable permanezca enchufado.
- Haga que un electricista verifique que todo el cableado del tomacorriente sea correcto y que cumpla con los requisitos del código local antes de conectar el EVSE.
- **No Use** este EVSE con un cable de extensión o adaptador de enchufe de pared. Conecte este EVSE directamente a la toma el receptáculo.
- Asegúrese de que el EVSE esté montado en la pared o colocado sobre un soporte para que no cuelgue del receptáculo. Los enchufes no están diseñados para soportar el peso del EVSE.

Additional Safety Information



WARNING: Turn off power to the EVSE at the circuit breaker panel before moving, servicing or cleaning the unit.

AVERTISSEMENT: Couper l'alimentation d'entrée à votre station de recharge sur le panneau de disjoncteur avant de nettoyer ou de réparer l'appareil.

ADVERTENCIA: Desconecte la alimentación del EVSE en el panel del interruptor automático antes de mover, reparar o limpiar la unidad.



WARNING: Always turn off input power to the EVSE at the circuit breaker panel prior to plugging into or unplugging from a wall socket.

AVERTISSEMENT: Toujours éteindre la puissance d'entrée du EVSE sur le panneau du disjoncteur avant de brancher ou de débrancher un socket mur.

ADVERTENCIA: Apague siempre la alimentación de entrada al EVSE en el panel del interruptor de circuito, antes de enchufarlo o desenchufarlo de un tomacorriente.

NOTE: VENTILATION - Some electric vehicles require an external ventilation system to prevent the accumulation of hazardous or explosive gases when charging indoors. Consult the vehicle owner's manual to determine if your vehicle requires ventilation during indoor charging.

REMARQUE: VENTILATION - Certains véhicules électriques requiert un système de ventilation externe afin de prévenir l'accumulation de gaz dangereux ou explosifs lors de chargement à l'intérieur. Consulter le manuel du propriétaire pour déterminer si le véhicule requiert de la ventilation lors d'un chargement à l'intérieur.

NOTA: VENTILACIÓN - Algunos vehículos eléctricos requieren un sistema de ventilación externo para evitar la acumulación de gases peligrosos o explosivos, al ser cargados en interiores. Consulte el manual del propietario del vehículo para determinar si su vehículo requiere ventilación durante la carga en interiores.

NOTE: Vehicles which conform to the SAE J1772 standard for communication can inform the charge station that they require an exhaust fan. The LCS is not equipped to control ventilation fans. Do not charge the vehicle with the LCS if ventilation is required.

REMARQUE: Véhicules qui sont conformes à la norme SAE J1772 de communication peuvent informer la station de recharge qu'ils nécessitent un ventilateur d'extraction. Le LCS n'est pas équipé pour contrôler les ventilateurs. Ne chargez pas le véhicule avec les LCS si la ventilation est nécessaire.

NOTA: Los vehículos que cumplan con el estándar de comunicación SAE J1772 pueden informar que su EVSE requieren un extractor de aire. El LCS no está equipado para controlar ventiladores. No cargue el vehículo con el LCS si se requiere ventilación.



CAUTION: DO NOT CHARGE a vehicle indoors if it requires ventilation. Contact your Service Representative for information.

ATTENTION: NE PAS RECHARGER un véhicule à l'intérieur si il nécessite une ventilation. Contactez votre représentant de service pour plus d'informations.

ATENCIÓN: NO RECARGUE un vehículo en interiores si requiere ventilación. Póngase en contacto con su Representante de Servicio Técnico para obtener más información.

Save these instructions for future reference.

Conservez ces instructions pour référence future.

Guarde estas instrucciones para referencias futuras.

***THIS DEVICE IS NOT INTENDED FOR USE WITH
AN EXTENSION CORD.***

FCC INFORMATION

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This product has been designed to protect against Radio Frequency Interference (RFI). However, there are some instances where high powered radio signals or nearby RF-producing equipment (such as digital phones, RF communications equipment, etc.) could affect operation.

If interference to the EVSE is suspected, we suggest the following steps be taken before consulting your ClipperCreek Sales and Service Representative for assistance:

1. Reorient or relocate nearby electrical appliances or equipment during charging.
2. Turn off nearby electrical appliances or equipment during charging.



CAUTION: Changes or modifications to this product by other than an authorized service facility may void FCC compliance.

ATTENTION: Modifications apportées à ce produit par quiconque autre qu'un centre de service autorisé peut annuler la conformité FCC.

ATENCIÓN: Cambios o modificaciones a este product por otros que no sean un centro de servicio autorizado pueden anular el cumplimiento con la FCC.

OPERATION

The LCS Electric Vehicle Charging Station is a compact wall-mounted charging station that provides the Plug-in Hybrid or Battery Electric Vehicle (together Plug-In Electric Vehicles, or “PEV”) user with a safe and manageable link between the power grid and the PEV. Both hardwired (LCS) and NEMA plug-equipped (LCS-P) versions are available.

To use the LCS simply unwrap the charge cable and plug the SAE J1772 connector firmly into the vehicle’s charge port.

Normally, the vehicle will immediately request a charge using a special communication line in the cable. Within a few seconds the green “Charging” light on the face of the LCS will turn on and the charging cycle will begin. After an average driving day the vehicle battery pack will require several hours to recharge completely. Charging overnight is the most convenient way to maintain healthy batteries and ensure the vehicle’s full range will be available for the next day.

When the vehicle has stopped charging the green “Charging” light on the LCS will turn off. To remove the charge coupler once a charge cycle has completed (or to interrupt a charge in progress) press and hold down the latch release lever on the charge coupler handle then unplug the charge coupler from the vehicle charge port.

The LCS Front Panel

The front panel on the LCS has four indicator lights:

POWER (Amber), indicates that power is available to the LCS.

CHARGING (Green), indicates that the vehicle is requesting a charge and AC power is currently applied to the vehicle.

POWER FAULT (Red), indicates that the LCS is not wired correctly. The problem can be due to improper grounding or a missing Earth Ground. The wiring should be examined by a qualified electrician.

CHARGING FAULT (Red), indicates that the LCS is unable to communicate with the vehicle correctly, or a safety fault condition has been detected by the unit.

Figure 1: The LCS Front Panel

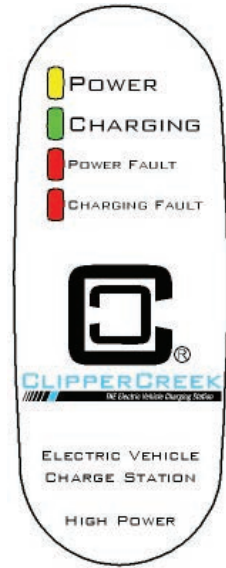


Table 1: Front Panel LED Information

#	Amber Power LED	Green Charging LED	Red Power Fault LED	Red Charging Fault LED	Fault Condition
1	off	off	off	off	No power to EVSE. Check circuit breaker.
2	ON	off	off	off	Not plugged into the EV or the EV is not ready to charge.
3	ON	ON	off	off	Charging enabled, power is applied to the vehicle.
4	ON	off	ON - not blinking	off	Improper grounding or ground is not present.
5	ON	off	off	ON - not blinking	Problem with EV communications. Disconnect and restart.
6	ON	off	off	blinking	EV ground fault trip. Check vehicle connection.
7	ON	off	blinking	blinking	Internal EVSE fault. Call for service.

INSTALLATION: SERVICE CONNECTIONS



CAUTION: To reduce the risk of fire, connect only to a circuit provided with the appropriate maximum branch circuit overcurrent protection in accordance with the National Electrical Code, ANSI/NFPA 70 (US) or the Canadian Electric Code C22.2 NO. 280-13 (Canada).

ATTENTION: Pour réduire le risque d'incendie, de se connecter uniquement à un circuit fourni avec le approprié surintensités, en conformité avec le Code National électrique ANSI/NFPA 70 (US) ou Code Canadien de l'électricité C22.2 NO. 280-13 (Canada).

ATENCIÓN: Para reducir el riesgo de incendio, conecte sólo a un circuito proporcionado con la máxima protección adecuada contra sobre corriente del circuito derivado de acuerdo con el Código Eléctrico Nacional, ANSI/NFPA 70 (EE.UU) o el Código Eléctrico Canadiense C22.2 NO. 280-13 (Canadá).

Table 2: LCS Configurations

Service Connections Table LCS Model LCS Modèle Modelo LCS	Circuit Breaker Rating Calibre de Disjoncteur Clasificación del interruptor	Receptacle Type Prise Électrique Tipo de conexión/receptáculo
LCS-10 (Hardwired)	10A	n/a
LCS-15 (Hardwired)	15A	n/a
LCS-20 (Hardwired)	20A	n/a
LCS-20P + NEMA 14-30P	30A	NEMA 14-30R
LCS-20P + NEMA 6-50P	40/50A	NEMA 6-50R
LCS-20P + NEMA 14-50P	40/50A	NEMA 14-50R
LCS-25 (Hardwired)	25A	n/a
LCS-25P + NEMA 14-30P	30A	NEMA 14-30R
LCS-25P + NEMA 6-50P	40/50A	NEMA 6-50R
LCS-25P + NEMA 14-50P	40/50A	NEMA 14-50R
LCS-30 (Hardwired)	30A	n/a
LCS-30P + NEMA 14-30P	30A	NEMA 14-30R
LCS-30P + NEMA 6-50P	40/50A	NEMA 6-50R
LCS-30P + NEMA 14-50P	40/50A	NEMA 14-50R



CAUTION: This is a single-phase device. Do not connect all three phases of a 3-phase feed! You may use any two phases of a three-phase wye-transformer feed. The center-point of the three phases (usually used as Neutral) must be grounded somewhere in the system. A Neutral connection is not required by the LCS. Only Line 1, Line 2, and Ground are required, as shown in **Figure 3**.

ATTENTION: Il s'agit d'un appareil monophasé. Ne pas relier tous les trois phases d'une alimentation triphasée! Vous pouvez utiliser les deux phases d'un triphasé en étoile transformateur alimentation. Le point central des triphasé (généralement utilisé comme Neutre) doit être mis à la terre quelque part dans le système. Une connexion Neutre n'est pas exigée par la LCS. Seulement ligne 1, ligne 2, et Mise à la Terre sont nécessaires, comme le montre la **Figure 3**.

ATENCIÓN: Este es un dispositivo de una sola fase. ¡No conecte las tres fases de una alimentación trifásica! Puede utilizar cualquiera dos fases de un transformador trifásico de alimentación “Y”. El punto central de las tres fases (generalmente utilizado como Neutro) debe estar conectado a tierra en algún punto del sistema. Una conexión Neutra no es requerida por la LCS. Sólo la Línea 1, Línea 2, y la Conexión a Tierra son necesarias, tal y como se muestra en la **Figura 3**.



CAUTION: The two phases used must each measure 120V to Neutral. Earth Ground must be connected to Neutral at only one point, usually at the service entry breaker panel.

ATTENTION: Les deux phases utilisées doivent mesurer chaque 120V à Neutre. Mise à la terre doit être connecté au Neutre en un seul point, généralement à l'entrée panneau de disjoncteurs de service.

ATENCIÓN: Las dos fases utilizadas deben cuantificar 120V a punto Neutro. La Conexión a Tierra debe conectarse al punto Neutro en un solo punto, general-mente en la entrada de servicio del panel de interruptores automáticos.



CAUTION: If a 240V 3-phase feed is from a Delta-connected secondary, the leg used must have a center-tap. That tap must be Grounded. Only the two phases either side of the center-tapped leg can be used. **See Figure 4.**

ATTENTION: Si une alimentation à triphasé 240V provient d'un triangle connecté secondaire, la bornes utilisée doit avoir un centre-tap. Que la tap doit être Mise à la Terre. Seuls les deux phases l'une ou l'autre côté du centre tapped brancher peut être utilisé. **Voir la Figure 4.**

ATENCIÓN: Si una alimentación trifásica de 240V es de conexión secundaria Delta, la pierna utilizada debe tener una derivación central. Esa derivación debe Conectar a Tierra. Sólo las dos fases en cualquier lado de la pierna de derivación central pueden ser utilizadas. **Consulte la Figura 4.**



CAUTION: Warranty is void if this unit is not wired properly.

ATTENTION: La garantie est annulée si cette unité n'est pas correctement câblé.

ATENCIÓN: La garantía se anula si esta unidad no está cableada correctamente.



WARNING: Only a qualified electrician should perform the installation. The installation must be performed in accordance with all local electrical codes and ordinances.

AVERTISSEMENT: Seul un électricien qualifié doit effectuer l'installation. L'installation doit être effectuée conformément à tous les codes électriques locaux et des ordonnances.

ADVERTENCIA: Sólo un electricista capacitado debe realizar la instalación. La instalación debe realizarse conforme a todos los códigos y ordenanzas locales.

Only 3 wires are connected, but care must be taken that the service transformer secondary connection is definitely known, and the 3 wires from the main circuit breaker panel are connected and labeled correctly. Figures 2, 3, and 4 show the most common service transformer secondary wiring formats.

Notice that L1, L2, & Ground are labeled on each diagram. Those transformer outputs correspond to the same inputs on the LCS. Also, each of the two 3-phase diagrams shows an L3 output, which *is not used*. **Do not connect all three phases of a 3-phase secondary to the LCS. This is a single-phase device.**

The Neutral at the service panel must be connected to Earth Ground somewhere in the system on any of the three connection arrangements. Ground-fault protection is not possible unless the Neutral (center-tap on the service transformer) is connected to an Earth Ground. If no Ground is provided by the electrical service, a grounding stake must be driven into the ground nearby, following local electrical codes. The grounding stake must be connected to the ground bar in the main breaker panel, and Neutral connected to Ground at that point.



WARNING: Local electrical codes must always be followed when installing the grounding stake.

AVERTISSEMENT: Les codes électriques locaux doivent toujours être respectées lors de l'installation du piquet de mise à la terre.

ADVERTENCIA: Siempre se deben seguir los códigos eléctricos locales al instalar la estaca de conexión a tierra.

The following diagrams illustrate the three service transformer secondary connections most common in North America.

Figure 2: 220/240V Single Phase


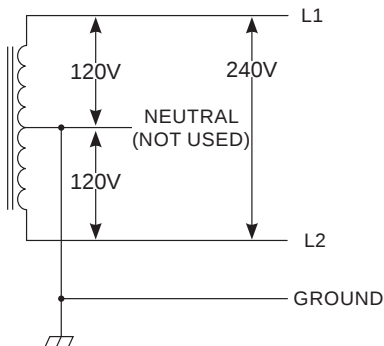



Figure 3: 208V 3-Phase, Wye-Connected

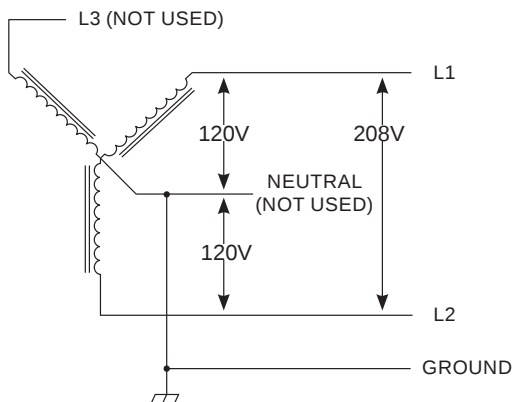

NOTE: With a wye-connected secondary, any two of the legs can be used to provide 208V to the LCS. For example, L1 & L2, or L1 & L3, or L2 & L3. Leave the unused leg open. Do not connect it to a Neutral bar, or to Ground. Be sure the center point is Earth Ground somewhere in the system.

REMARQUE: Avec un transformateur étoile-connecté secondaire, deux des lignes peut être utilisé pour fournir 208V à la LCS. Par exemple, L1 & L2, ou L1 & L3, ou L2 & L3. Laissez la borne inutilisée ouverte. Ne le connectez pas à un bar Neutre, ou à la Mise à la Terre. Assurez-vous que le point central est Mis à la Terre quelque part dans le système.

NOTA: Con un secundario conectado en “Y”, cualquiera de las dos piernas puede ser utilizada para proporcionar 208V a la LCS. Por ejemplo, L1 y L2 o L1 y L3 o L2 y L3. Deje la pierna no inutilizada abierta. No la conecte a la Barra Neutro, o a Tierra. Asegúrese de que el punto central está conectado a Tierra en algún punto del sistema.

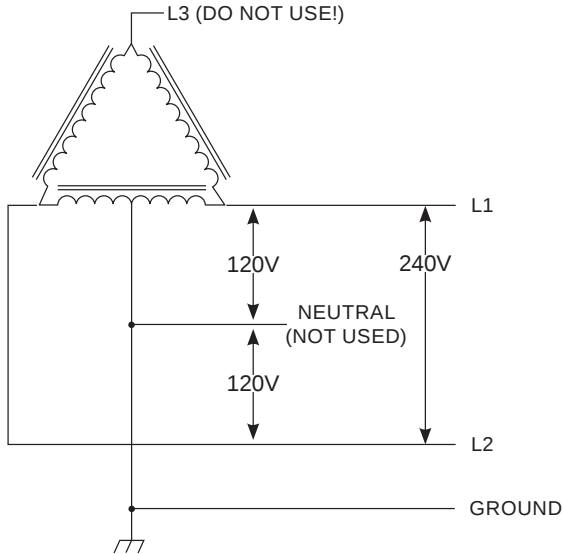Figure 4: 240V 3-Phase, Delta-Connected, with Center-Tap on One Leg

CAUTION: With the delta connection, one leg must be center-tapped. Only the two phases on either side of the center tap can be used. The two phases must both measure 120V to Neutral. The third line (L3) of the delta is 208V, with respect to Neutral, and is sometimes referred to as a “stinger”. **Do not use this third line!** Consult the transformer manufacturer’s literature to be sure the single leg can supply the required power.

ATTENTION: Avec la connexion triangle, une borne doit être centre-tappée, et seulement les deux phases d’un côté ou de l’autre du centre tap peut être utilisé. Les deux phases doivent mesurer 120V à Neutre. La troisième ligne (L3) du delta est 208V, par rapport à la position Neutre, et il est parfois désigné comme un “stinger.” **Ne pas utiliser ce troisième ligne!** Consultez la documentation du transformateur fabricant pour être sûr du borne unique peut fournir la puissance requise.

ATENCIÓN: Con la conexión Delta, una pierna debe ser de derivación central. Sólo las dos fases en cualquier lado de la derivación central puede ser utilizada. Las dos fases, ambas deben cuantificar 120V a punto Neutro. La tercera línea (L3) del delta es de 208V, con respecto al punto Neutro, y se refiere a veces como un “stinger”. **¡No utilice esta tercera línea!** Consulte la documentación del fabricante del transformador para estar seguro de que la pierna única puede suministrar la potencia necesaria.



CAUTION: A 3-phase delta-connected transformer secondary without a center-tap on one leg cannot be used with the LCS. No “Neutral” point is available to be connected to ground for ground-fault protection. The LCS will not allow the contactor to close if it does not sense the presence of a Ground wire connected to a “Neutral” point on the transformer secondary.

ATTENTION: Un triphasé triangle-connecté transformateur secondaire sans centre-tap sur le terminal ne peut pas être utilisé avec la LCS. Aucun point “Neutre” est disponible pour être connecté à Mise à la Terre pour protection de défaut à la terre. Le LCS ne permettra pas le contacteur de fermer si elle ne détecte pas la présence d’un fil de Masse connecté à un point “Neutre” sur le secondaire du transformateur.

ATENCIÓN: Un transformador trifásico secundario de conexión delta sin derivación central en una pierna no puede ser utilizado la LCS. Ningún punto “Neutro” está disponible para ser conectado a tierra para protección contra falla de tierra. La LCS no permitirá que el contactor cierre si no detecta la presencia de un cable de Tierra conectado a un punto “Neutro” en el secundario del transformador.

MOUNTING PROCEDURES

Locate the wall mounting position of the EVSE:

- On the hardwired LCS, the three service conductors are shielded by three feet of flexible conduit. The LCS must be positioned such that this conduit can reach a nearby service panel or junction box.
- On the plug-in LCS-P, the NEMA plug head is connected by nearly one foot of cable to the top side of the LCS-P. The LCS-P must be positioned such that this plug can safely be inserted into a wall-mounted NEMA socket.
- Position the bottom of the LCS at a comfortable height and at least 18 inches above the ground. Ensure that the LEDs on the front panel of the EVSE can clearly be seen by anyone who will be operating the device.
- The LCS has four mounting holes spaced in a 2" wide by 10" tall rectangular pattern. Use a template to mark hole locations on the wall.



WARNING: For safety, always turn off input power to the EVSE at the circuit breaker panel prior to plugging it in or wiring it to the service lines. Likewise, turn off the circuit breaker prior to unplugging it or disconnecting the unit from the service lines.


AVERTISSEMENT: Pour sécurité, toujours désactiver le courant d'entrée de la station de recharge au niveau du disjoncteur du panneau avant de le brancher ou de câblage à les lignes de service. De même, coupez le disjoncteur avant de le débrancher ou déconnecter l'unité à partir des lignes de services.

ADVERTENCIA: Por razones de seguridad, siempre apague la alimentación de entrada a la estación de carga en el panel de interruptores automáticos de circuito antes de enchufarlo o cablearlo a las líneas de servicio. Igualmente, apague el interruptor automático de circuito antes de desenchufarlo o desconectar la unidad de las líneas de servicio.

LCS EVSE Mounting for Hollow-Wall Construction

- Place the unit such that at least two (but preferably all four) mounting holes can take advantage of solid structural framing inside of the wall or a strong wall surface such as plywood.
- For any remaining mounting holes which do not have a solid mounting structure (such as drywall without a solid backing) it will be necessary to use proper anchoring hardware such as drywall toggles or molly bolts.

Figure 5: Mounting the LCS to a Hollow-Wall

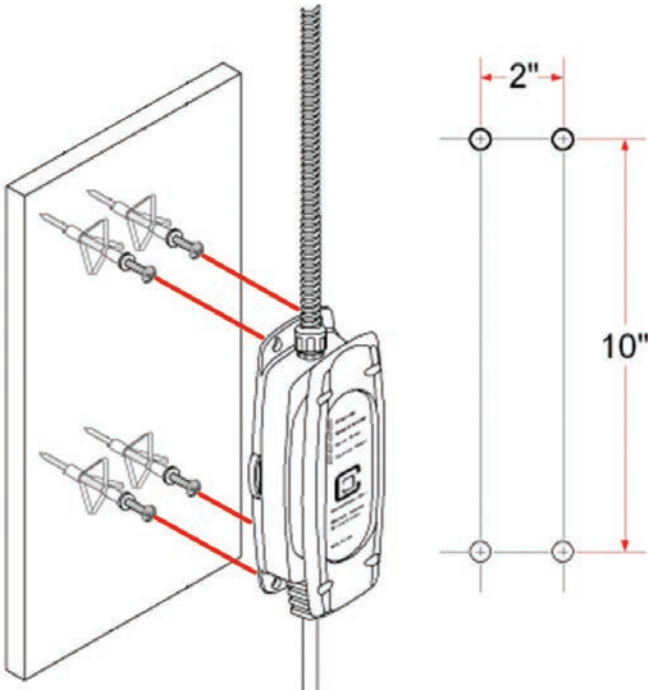


LCS EVSE Mounting for Solid-Wall Construction

- To secure the unit in concrete, pre-drill appropriately sized holes and use multi-set or wedge anchor hardware at all four mounting points.
- To secure the unit in brick or stone, pre-drill appropriately sized holes and use multi-set or wedge anchor hardware at all four mounting points.

Machine screw size #10 hardware is recommended for mounting the LCS. Screw shafts of at least 2" are recommended. The LCS mounting holes are 3/16" in diameter, so ensure that the screw heads do not exceed this size. Place appropriately sized washers between the screw heads and the LCS enclosure mounting flanges.

Figure 6: Mounting the LCS to a Solid-Wall

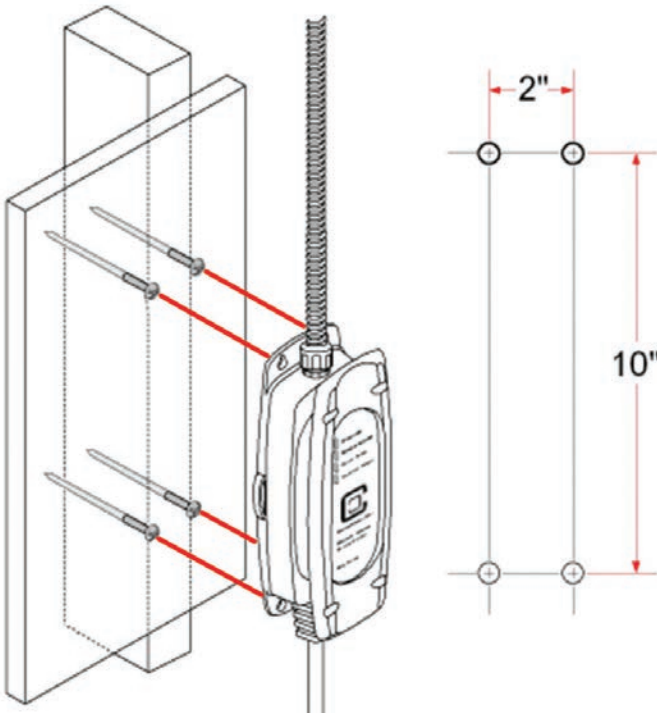


MOUNTING THE SAE J1772 CONNECTOR HOLSTER

The SAE J1772 connector holster comes standard to provide a convenient, protective housing for the SAE J1772 connector head when it is not in use.

- The SAE J1772 connector holster should be placed so that users have easy and safe access to the SAE J1772 connector.
- For indoor installation, mount the SAE J1772 connector holster between 18 and 48 inches above the ground or grade.
- For outdoor installation, mount the SAE J1772 connector holster between 24 and 48 inches above the ground or grade.
- The SAE J1772 connector holster has two vertically aligned mounting holes spaced 5.45" apart, one each on the enclosure top and bottom. Use a ruler or template to mark hole locations on the mounting surface.
- The vertical alignment of the LCS and SAE J1772 connector holster mounting holes allows for the convenient mounting of both components onto the same post or wall structure. For example, the holster may be mounted directly above the LCS.
- Place the SAE J1772 connector holster such that both mounting holes can take advantage of solid structural framing inside of the wall or a strong wall surface such as plywood.
- A set of exterior wood screws and stainless steel washers are included for the purposes of mounting the SAE J1772 connector holster to a wooden surface.
- For mounting to a solid surface such as concrete, brick, or stone, alternate hardware may need to be procured. Examples of solid-wall mounting hardware include multi-sets, wedge anchors and sleeve anchors. Use the type of mounting hardware most appropriate for the supporting structure.


Figure 7: Mounting the LCS Connector Holster using the Exterior Wood Screws and Washers

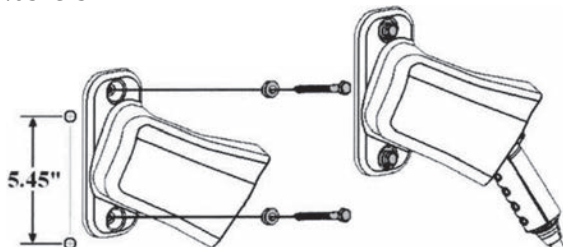

WIRING INSTRUCTIONS (Hardwired LCS)

Route the LCS conduit to a nearby service panel or junction box. Use the included ¼" trade size watertight fitting to provide a moisture-resistant seal with the service panel or junction box. If necessary, drill a ½" diameter hole to accommodate the liquid-tight fitting or use the included ¼" NPT to ½" NPT thread reducer kit.

Figure 8: Wiring the LCS in a Junction Box

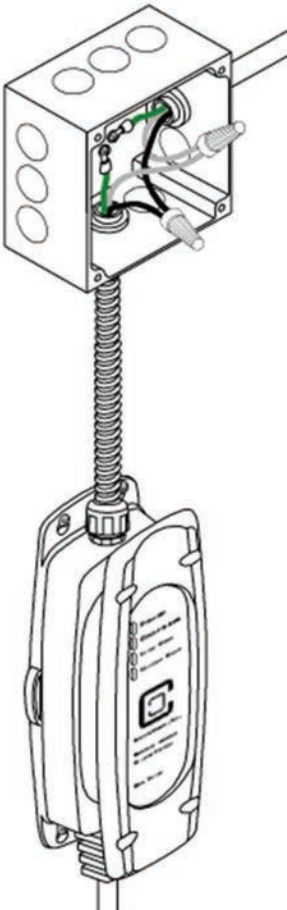

NOTE: Before connecting the LCS service conductors, please carefully read the section of this manual titled Service Connections on page 15. If you are unsure of the type of power provided at the service panel, please consult with your local utility or call your Service Representative for assistance.

NOTE: The three LCS service conductors use stranded 12AWG, 75°C copper wire. The insulation of each conductor is color coded for standard 240V AC installation:

- Green: Ground
- Black: Line 1 (120V AC to Ground)
- Red: Line 2 (120V AC to Ground)

REMARQUE: Les trois conducteurs service la LCS utiliser multibrins 12 AWG, 75°C fil de cuivre. L'isolation de chaque conducteur est un code couleur pour une installation standard de 240 VAC:

- Vert: Mise à la Terre
- Noir: Ligne 1 (120VAC à Mise à la Terre)
- Rouge: Ligne 2 (120VAC à Mise à la Terre)

NOTA: Los tres conductores de servicio EVSE utilizan cable de cobre trenzado de 10 AWG y 75°C. El aislamiento de cada conductor está codificado por colores para la instalación estándar de 240 V CA:

- Verde: Tierra
- Negro: Línea 1 (120V CA a tierra)
- Rojo: Línea 2 (120V CA a tierra)

RECEPTACLE INSTRUCTIONS (Plug-In LCS-P)


The LCS-P is fitted with one of the following NEMA plugs:

NEMA 14-30P
NEMA 6-50P
NEMA 14-50P

The plug extends from the top of the LCS enclosure. Regulations limit this plug to a maximum of 12 inches in length. For this reason, the LCS-P must be mounted below the NEMA receptacle and must also be located within 12 inches of it.

The ground pin is located at the top position of the plug. With this in mind, it is recommended that the receptacle be oriented accordingly, such that the ground socket is at the highest point.

Figure 9: Preferred Orientation of the NEMA Receptacles above the LCS-P

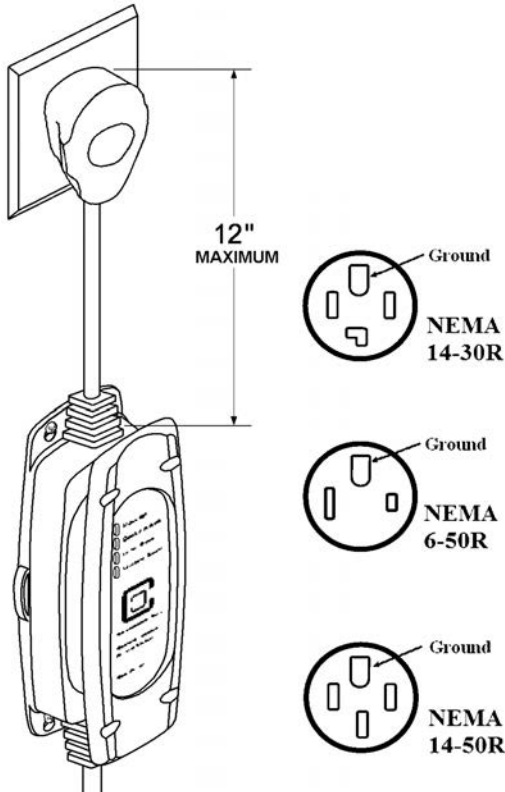


NEMA 14-30 plug shown in figure

CHARGE CABLE WRAP GUIDELINES

The LCS enclosure body is sculpted to allow the charge cable to be wrapped around it for convenient storage as well as to keep the bulk of the cable off of the ground and out of the way. As the charge cable is comprised of a number of wires, coiling the charge cable too tightly around the LCS enclosure will result in the charge cable feeling warmer to the touch than would ordinarily be the case.

To minimize this effect, it is recommended that the charge cable be loosely draped around the LCS enclosure with larger loops. This will also permit greater convenience in “pulling off” additional loops if a longer charge cable reach is desired.

Figure 10: Drape the Charge Cable Loosely around the LCS Enclosure

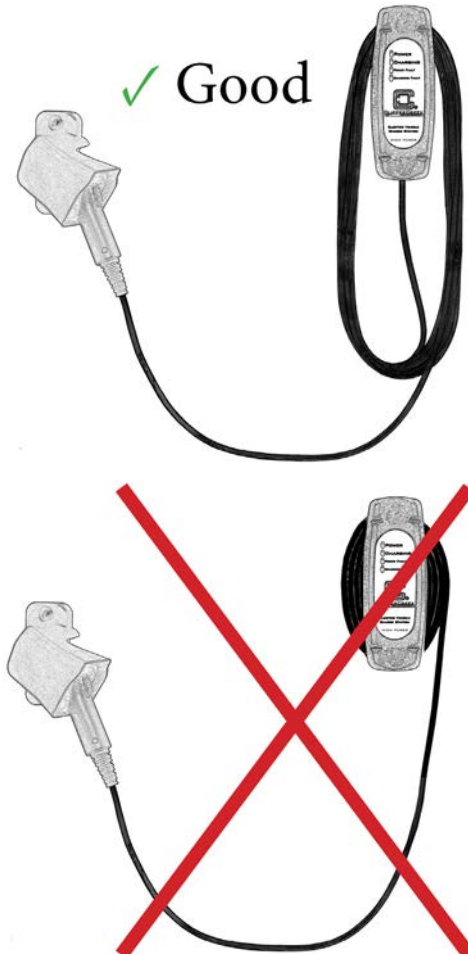

GROUNDING INSTRUCTIONS

This product must be grounded. If this product should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock.

LCS Hardwired EVSE Grounding

The hardwired LCS is equipped with three service conductors shielded by three feet of flexible conduit. This product must be connected to a grounded, metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the ground lead on the product.

LCS-P Plug-in EVSE Grounding

The plug-in LCS-P is equipped with a cord having an equipment grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.



WARNING: Improper connection of the equipment-grounding conductor may result in a risk of electric shock. Check with a qualified electrician if doubt exists as to whether the product is properly grounded. Do not modify the plug provided with the product – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

AVERTISSEMENT: Une mauvaise connexion du conducteur de terre peut entraîner un risque de choc électrique. Vérifier avec un électricien qualifié si il existe un doute quant à savoir si le produit est correctement mis à la terre. Ne pas modifier la fiche fournie avec le produit – si elle n'entre pas dans la prise, faites installer une prise adéquate par un électricien qualifié.

ADVERTENCIA: La conexión incorrecta del conductor de equipo a tierra puede resultar en un riesgo de descarga eléctrica. Consulte con un electricista calificado si existe la duda de si el producto está correctamente conectado a tierra. No modifique el enchufe suministrado con el producto – si no entra en el receptáculo, tenga un receptáculo adecuado instalado por un electricista cualificado.

MOVING & STORAGE INSTRUCTIONS

NOTE: Both the hardwired LCS and the plug-in LCS-P are intended for fixed installations. For mounting requirements, consult the **Mounting Procedures** section of the **Installation Instructions** in this manual.

Always turn off input power to the EVSE at the circuit breaker panel prior to hard-wiring an LCS to or disconnecting an LCS from the service lines. Likewise, always turn off input power to the EVSE at the circuit breaker panel prior to plugging an LCS-P into or unplugging an LCS-P from a NEMA socket.

When transporting the EVSE, do not lift or carry the entire unit by the SAE J1772 charge cord. Likewise, do not lift or carry the entire unit by the flexible conduit and input conductors (LCS) or the NEMA plug (LCS-P).

The EVSE has a non-operational storage temperature range of -40°C to +80°C (-40°F to +176°F).

MAINTENANCE

The LCS requires no periodic maintenance other than occasional cleaning.



WARNING: To reduce the risk of electrical shock or equipment damage, exercise caution while cleaning the EVSE and the EV charge connector cable.

1. Turn off the EVSE at the circuit breaker.
2. Unplug the EVSE from the receptacle.
3. Clean the EVSE using a soft cloth lightly moistened with mild detergent solution. Never use any type of abrasive pad, scouring powder, or flammable solvents such as alcohol or benzene.

AVERTISSEMENT: Pour réduire le risque de choc électrique ou des dommages équipement, user de prudence lors du nettoyage de l'appareil et le câble du connecteur de charge EV.

1. Eteignez la équipement au disjoncteur avant de le nettoyer.
2. Débranchez l'EVSE du recopérable.
3. Nettoyez l'équipement à l'aide d'un chiffon doux légèrement humidifié avec une solution de détergent doux. Ne jamais utiliser de tampons abrasifs, de poudre à récurer ou de solvants inflammables tels que l'alcool ou le benzène.

ADVERTENCIA: Para reducir el riesgo de descarga eléctrica o daños al equipo, debe tener cuidado durante la limpieza de la unidad y el cable del conector de carga EV.

1. Apague la estación de carga en el interruptor automático de circuito antes de la limpiar.
2. Desenchufe el EVSE del receptáculo.
3. Limpie la estación de carga con un paño suave ligeramente humedecido con una solución de detergente suave. Nunca utilice ningún tipo de estropajo abrasivo, polvo limpiador o disolventes inflamables tales como alcohol o bencina.

SPECIFICATIONS

Line Input Power Voltage & Wiring:	240V AC single-phase - L1, L2, and Safety Ground. 208V AC 3-phase wye-connected - Any 2 phases and Safety Ground. 240V AC 3-phase, delta-connected. With center-tap on one leg, must use only the two phases on either side of the center-tap. The two phases must both measure 120V AC to ground. Do not use the third leg (208V “Stinger”).			
	Supplied Service Conductors:			
	Voltage Range:		Frequency:	60 Hz
	CCID:			
Includes CCID with automatic reset. Trips at 20mA.				
LCS Model	Circuit Breaker	Maximum Current	Output Power	Cable Length
LCS-10 (Hardwired)	10A	08A	1.9 KW	25 ft (7.6M)
LCS-15 (Hardwired)	15A	12A	2.9 KW	25 ft (7.6M)
LCS-20 (Hardwired)	20A	16A	3.8 KW	25 ft (7.6M)
LCS-20P + NEMA 14-30P	30A	16A	3.8 KW	25 ft (7.6M)
LCS-20P + NEMA 6-50P	40/50A	16A	3.8 KW	25 ft (7.6M)
LCS-20P + NEMA 14-50P	40/50A	16A	3.8 KW	25 ft (7.6M)
LCS-25 (Hardwired)	25A	20A	4.8 KW	25 ft (7.6M)
LCS-25P + NEMA 14-30P	30A	20A	4.8 KW	25 ft (7.6M)
LCS-25P + NEMA 6-50P	40/50A	20A	4.8 KW	25 ft (7.6M)
LCS-25P + NEMA 14-50P	40/50A	20A	4.8 KW	25 ft (7.6M)
LCS-30 (Hardwired)	30A	24A	5.8 KW	25 ft (7.6M)
LCS-30P + NEMA 14-30P	30A	24A	5.8 KW	25 ft (7.6M)
LCS-30P + NEMA 6-50P	40/50A	24A	5.8 KW	25 ft (7.6M)
LCS-30P + NEMA 14-50P	40/50A	24A	5.8 KW	25 ft (7.6M)

Note that the maximum current for the vehicle is set by the duty cycle of the Pilot waveform. Output power is variable depending upon the LCS model and vehicle demand.

Plugs:	Attached NEMA 14-30P, NEMA 6-50P and NEMA 14-50P plugs are available for the LCS-20P, LCS-25P and LCS-30P.		
Dimensions:	Dimensions are for the enclosure only:		
	Height	280 mm	(11 in)
	Width	100 mm	(4 in)
	Depth	80 mm	(3 in)
Weight:	LCS-20 weighs approx. 2.4 kg (5.2 lbs) with SAE J1772 connector and 25' length of cable		
	LCS-25 and LCS-30 weighs approx. 2.9 kg (6.4 lbs) with SAE J1772 connector and 25' length of cable		
	LCS-20P weighs approx. 2.5 kg (5.6 lbs) with SAE J1772 connector and 25' length of cable		
	LCS-25P and LCS-30P weighs approx. 3.0 kg (6.6 lbs) with SAE J1772 connector and 25' length of cable		
Environment:	Operating Temperature:	-30°C to +50°C -22°F to +122°F	
	Storage Temperature:	-40°C to +80°C -40°F to +176°F	
	Enclosure Rating:	NEMA 4 - watertight	
Agency Approvals:	cULus Listed, ETL Listed, FCC Part 15 Class B, ENERGY STAR® Certified		

CUSTOMER SUPPORT

Call your ClipperCreek Service Representative at any time, 24 hours a day, at the number below. **PLEASE HAVE THE MODEL NUMBER AND SERIAL NUMBER AVAILABLE WHEN YOU CALL.** This information is printed on the label on the side of the LCS enclosure. If your call is made after business hours or on weekends, please leave your name, telephone number, the unit serial number, and a brief description of the problem. A Service Representative will call back at the earliest opportunity.

**Distributor Service
Number Here**

To contact ClipperCreek directly for service, call (877) 694-4194 Monday - Friday, 8am - 5pm Pacific Time.



LIMITED WARRANTY – ELECTRIC VEHICLE SUPPLY EQUIPMENT and ACCESSORIES

Enphase Energy, Inc. through its ClipperCreek division
11850 Kemper Road
Auburn, California 95603
Phone: 877-694-4194
Email: information@clippercreek.net

Subject to the terms and conditions below, Enphase Energy, Inc. (“**Enphase**”) provides the following limited warranty the original purchaser of the products (“**Covered Owner**” or “**you**”):

Product 3-year parts, 3-year factory labor:

Subject to the terms and conditions below, Enphase warrants the product to be free from defects in material and workmanship for a period of 3 years commencing on the date of installation (first use) (the “**Warranty Start Date**”). Except where prohibited by applicable law, the product installation date must be evidenced and communicated to Enphase by way of the warranty registration card (or its equivalent). The product registration card must be filled out completely and accurately, and returned to Enphase within 30 days after installation, and the product installation date shall be within 6 months after the purchase date. If a Product installation date is not communicated to Enphase as described above, the product purchase date indicated in the Covered Owner’s proof of purchase for the product shall serve as the start date of the Warranty Period.

If Enphase confirms the existence of a defect that is covered by this Limited Warranty, Enphase will, at its option, repair or replace the product, or refund the actual purchase price for the product less reasonable depreciation based on use at the time the Enphase is notified of the defect. Enphase will not elect to issue a refund unless (i) Enphase is unable to provide a replacement and repair is not commercially practicable or cannot be timely made, or (ii) Covered Owner is willing to accept such a refund. If a defect in material or workmanship exists in the product, to the extent permitted by law, these are the sole and exclusive remedies. Repair parts and/or replacement products may be either new or reconditioned at Enphase’s discretion. This limited warranty does not cover defects caused by improper installation or use, including but not limited to improper connections with peripherals, external electrical faults, accident, disaster, misuse, abuse, or modifications to the product not made by or at the direction of Enphase. Any service repair outside the scope of this limited warranty shall be at applicable rates and terms then in effect. This warranty covers factory parts and factory labor only; it does not cover field service or removal and replacement of the product or any other costs.

All other express and implied warranties for this product including the warranties of merchantability, fitness for a particular purpose, and non-infringement are hereby disclaimed. Some states do not allow the exclusion of implied warranties or limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event will Enphase, any of its authorized sales and service representatives, or its parent company be liable to Covered Owner or any third party for any damages in excess of the purchase price of the product. This limitation applies to damages of any kind including any direct or indirect damages, lost profits, lost saving or other special, incidental, exemplary or consequential damages whether for breach of contract, tort or otherwise or whether arising out of the use of or inability to use the product, even if Enphase or an authorized Enphase representative or dealer has been advised of the possibility of such damages or of any claim by any other party. Some states do not allow the exclusion or limitation of incidental damages for some products, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

To obtain warranty service:

Call your nearest authorized Service Representative or the ClipperCreek division of Enphase at the above number. You will receive information as to how service for the product will be provided. If you mail or ship the product in for service, you must insure the product, prepay all shipping charges, and properly pack it for shipment in its original shipping container or its equivalent. You are responsible for all loss or damage that may occur in transit. You must provide proof of purchase for the product and the purchase date before any warranty service can be performed.

This page is intentionally blank.

This page is intentionally blank.



CLIPPERCREEK

A division of Enphase Energy, Inc.

WWW.CLIPPERCREEK.COM

877-694-4194